

CANON				
Artikel Nr	Bezeichnung	Spannung V	Kapazität mAh	Wattstunden
980010	<b>Canon NB-1LH</b> Digital Ixus / Ixus V / Ixus 300,330,400,430,500 / V2 / V3	3,7	1000	3,7
980011	<b>Canon NB-2L</b> PowerShot S30,40,45,50,60,70,80/ EOS 350D EOS 400D / G7, 9 MV5, 5i, 5iMC, 6iMC / MV800 + 900 Serie MVX20i,25i,30i, 35i,40i,45i,200,i,250i, 300,330i,350i	7,4	750	5,6
980012	<b>Canon NB-3L</b> Digital Ixus II, IIs / Ixus i / Ixus i5, Ixus700/ Ixus750	3,7	790	2,9
980013	<b>Canon NB-4L</b> Digital Ixus 30,40,50,55,60,65,70,75, Ixus 80, 90, 100, 110IS Wireless / i Zoom / i7 / TX1, 801S	3,7	700	2,6
980009	<b>Canon NB-5L</b> Digital Ixus 90IS, 800IS, 850IS,860IS, 870, 900TI, 950IS, 960IS, 970, 980, 990IS, SX200IS	3,7	1120	4,1
980007	<b>Canon NB-6L</b> Ixus 85IS, 95IS, D10	3,7	1000	3,7
980039	<b>Canon NB-7L</b> PowerShot G10	7,4	1050	7,8
980086	<b>Canon NB-8L</b> A3100is, A3001is	3,6	740	2,7
980087	<b>Canon NB-9L</b> Ixus 1000HS, Ixy 50S, PowerShot SD4500 IS	3,5	700	2,5
980056	<b>Canon NB-10L</b> PowerShot SX40 HS	7,4	850	6,3
980006	<b>Canon LP-E5</b> EOS 450D, 1000D	7,4	800	5,9
980082	<b>Canon LP-E6</b> EOS 5D Mark II, Mark III, EOS 60D, EOS 7D	7,2	1500	10,8
980085	<b>Canon LP-E8</b> EOS 550D	7,2	950	6,8
980055	<b>Canon LP-E10</b> EOS 1100D	7,4	850	6,3
980008	<b>Canon BP-208</b> DC10, 20, 21, 22, 40,100 / MVX 400 Serie	7,4	850	6,3
980014	<b>Canon BP-511/512/ 514</b> Power Shot G 1,2,3,4,5,6 / Pro 90 IS / 95 / Pro1 / EOS 5D, 20D, 30D, 40D, 50D, 300D / MV30,30i,300,300i,400,400i,430i,450i,500i,530i,550i,X1i, X2i / MV600,700 Seire / MVX3i, 100i,150i	7,4	1500	11,1
980015	<b>Canon BP-522</b> MV30,30i,300,300i,400,400i,430i,450i,500i,530i,550i,X1i,X2i / MV600,700 Series / MVX3i,100i,150i	7,4	3000	22,2
980016	<b>Canon BP-535</b> MV30,30i,300,300i,400,400i,430i,450i,500i,530i,550i,X1i,X2i / MV600,700 Series / MVX3i,100i,150i	7,4	4500	33,3
980083	<b>Canon BP-819</b> VIXIA HF10, HF100, HF11, HG20, HG21, IVIS HF11, HF10	7,4	1780	13,2
980017	<b>Canon BP-2L14</b> MV5,5i, 5iMC,6iMC / MV800,830,830i,850i880X / + MV900 Serie, MVX20i,25i,30i,35i,40i, 45i,200i, 250i,300,330i,350i	7,4	1500	11,1
980019	<b>Canon BP-970/950/945/941/ 930/927/924/915/914/911</b> XL1,XL1s,XL2 / XM1, 2 / MV10,20,20i,100,200,200i	7,4	6600	48,8
NIKON				
980030	<b>Nikon EN-EL1 / Minolta NP-800</b> Coolpix 775,880,995,4300,4500,4800,5000,5700,8700	7,4	800	5,9
980032	<b>Nikon EN-EL3</b> D50, D 70, 70s, D100	7,4	1500	11,1
980028	<b>Nikon EN-EL3e</b> D80, D90, D200, D300, D700	7,4	1700	12,6
980033	<b>Nikon EN-EL5</b> Coolpix 3700, 4200, 5200, 5900, 7900 / P3, P4, P80, P5000, P6000, P5100 /S10	3,7	1000	3,7
980034	<b>Nikon EN-EL8</b> Coolpix S1, S2, S3, S5, S6, S7C, S9, S50C, S51, S51C S52, S52C / P1, P2	3,7	650	2,4

## NIKON

Artikel Nr	Bezeichnung	Spannung V	Kapazität mAh	Wattstunden
980026	<b>Nikon EN-EL9</b> D40, D40X, D60, D5000, D3000	7,4	1000	7,4
980004	<b>Nikon EN-EL10 / Fuji NP-45 / Olympus LI-40B/LI-42B</b> Coolpix S60, 200, 210, 220, 224, 230, 500, 510, 520, 600, 700	3,7	700	2,6
980037	<b>Nikon EN-EL11 / Pentax D-Li78 / Ricoh DB-80</b> Coolpix S550, S560	3,7	680	2,5
980038	<b>Nikon EN-EL12</b> S610, 610c, S710	3,7	1050	3,9
980052	<b>Nikon EN-EL14</b> D3100, D5100, D3200, Coolpix P7000, P7100, P7700	7,4	1030	7,6
980053	<b>Nikon EN-EL15</b> 1 V1, D600, D800, D7000	7,0	1400	9,8
980046	<b>Nikon EN-EL19</b> Coolpix S2500, S3100, S4100	3,7	700	2,6
980047	<b>Nikon EN-EL20</b> 1 J1	7,4	1020	7,5

## CASIO

980050	<b>Casio NP-20</b> Exilim EX-M1,M2,S1,S3,Z3,Z4, Z5, Z8, Z11, Z12, Z60,Z70, Z75 / EX-S100, 500, 600, 600D, 770	3,7	630	2,3
980060	<b>Casio NP-40</b> EX-Z30, Z40, Z50, Z55,Z57, Z300, Z500,Z700, Z750, Z850,Z1000, Z1050, Z1080, Z1200 / EX-P505	3,7	1230	4,6
980021	<b>Casio NP-30 / Pentax D-Li2 / Fuji NP-60 / Olympus Li-20B</b> QV-R 3,4	3,7	1050	3,9
980061	<b>Casio NP-50</b> Exilim EX-V7,V8	3,7	1000	3,7
980062	<b>Casio NP-60</b> EX-Z80, Z85, 100, 200, FS10	3,7	720	2,7
980063	<b>Casio NP-70</b> EX-Z250	3,7	1050	3,9
980064	<b>Casio NP-90</b> Exilim EX-H10	3,7	1950	7,2
980065	<b>Casio NP-110</b> EX-Z2000	3,7	1200	4,4

## PANASONIC

980076	<b>Panasonic DMW-BCK7</b> Lumix DMC-FS16, FS18, FS22, FS28, FS35, FS37, FS40, FS45, FT20, FX77, FX80, FX90, SZ1, SZ7	3,6	800	2,9
980100	<b>Panasonic CGA-S002</b> LUMIX DMC-FZ1, FZ2, FZ3, FZ5, FZ10, FZ20	7,2	600	4,3
980101	<b>Panasonic CGA-S004</b> LUMIX DMC-FX2, FX7	3,7	710	2,6
980102	<b>Panasonic CGA-S005 / Ricoh DB-60</b> LUMIX DMC-FX-3, 8, 9, 10, 12, 50, 100 / LX1, LX2 / FX01, FX07	3,7	1250	4,6
980103	<b>Panasonic CGR-S006</b> LUMIX DMC-FZ7, FZ8, FZ18, FZ30, FZ50	7,2	710	5,1
980133	<b>Panasonic CGA-S007</b> LUMIX DMC-TZ1, TZ2, TZ3, TZ4, TZ5	3,7	1000	3,7
980130	<b>Panasonic CGR-DU06 / CGA-DU07</b> VDR-D150, 250, 300 / NV-GS27, 37, 180, 280, 300, 400, 500	7,2	720	5,2
980131	<b>Panasonic CGA-DU12 / CGA-DU 14</b> VDR-D150, 250, 300 / NV-GS27, 37, 180, 280, 300, 400, 500	7,2	1440	10,4
980132	<b>Panasonic CGA-DU21</b> VDR-D150, 250, 300 / NV-GS27, 37, 180, 280, 300, 400, 500	7,2	2160	15,6
980134	<b>Panasonic DMW-BCE10E / VW-VBJ10 / Ricoh DB-70</b> LUMIX DMC-FX30, 33, 35, 37, 55, 500 / FS3, 5, 20	3,7	1000	3,7
980135	<b>Panasonic DMW-BCG10E</b> Lumix DMC-TZ6, TZ7, TZ8, TZ10, Lumix DMC-ZR1, ZR3, DMC-ZS1, ZS3, ZX1, ZX3	3,6	895	3,2

## PANASONIC

Artikel Nr	Bezeichnung	Spannung V	Kapazität mAh	Wattstunden
980136	<b>Panasonic DMW-BCF10E</b> Lumix DMC-FP8, FS12, 15, 25, 4, 42, 6, 62, 7, FT1, FX40, 48, 500, 550, 580, 60, 65, TS1	3,6	800	2,9
980142	<b>Panasonic DMW-BLB13</b> Lumix DMC-G1, GH1, GF1	7,2	1250	9,0
980143	<b>Panasonic DMW-BMB9, BMB9E, BMB9GK</b> Lumix DMC-FZ100, FZ45, FZ40, FZ48	7,2	950	6,8
980146	<b>Panasonic DMW-BCJ13E, DMW-BCJ13</b> Lumix DMC-LX5	3,6	1100	4,0

## FUJI

980020	<b>Fuji NP-40 / Pentax D-Li8</b> FinePix A700 / F460, 470, 610, 650, 700, 710, 810 / Z1, 3, 5 / V10	3,7	710	2,6
980004	<b>Fuji NP-45 / Olympus LI-40B/LI-42B / Nikon EN-EL10</b> J20, 25, 210, 250, Z30, 33WP	3,7	700	2,6
980025	<b>Fuji NP-50</b> FinePix F50fd, F60fd, F100fd, J50	3,7	750	2,8
980021	<b>Fuji NP-60 / Casio NP-30 / Olympus Li-20B / Pentax D-Li2</b> FinePix 50i, F401, F402, F410, F601 / M603	3,7	1050	3,9
980022	<b>Fuji NP-80 / Ricoh DB-20</b> FinePix 4800,4900,6800,6900 / MX1700,2700,2900	3,7	1500	5,6
980024	<b>Fuji NP-95</b> Finepix F30, F31fd	3,7	1800	6,7
980023	<b>Fuji NP-120 / Pentax D-Li7 / Ricoh DB-43</b> FinePix M 603, F10, F11	3,7	1800	6,7
980044	<b>Fuji NP-140</b> FinePix S100FS	7,2	1150	8,3

## OLYMPUS

980003	<b>Olympus BLS-1</b> E-400, E-410, E-420	7,2	1150	8,3
980048	<b>Olympus BLS-5</b> E-PL2, E-PL1s, E-PM1, E-PL3, E-P3	7,2	1100	7,9
980000	<b>Olympus BLM-1</b> C-5060, C-8080, C-7070, E-1, E-3, E30, E-300, E-330, E-500, E-510	7,2	1500	10,8
980001	<b>Olympus Li-10B / Li-12B</b> Camedia C-50, C-60, C-70, C-5000/ mju 300,400,410,500,800, 810, Digital 600 / C 760, C765, 770 / IR 500, FE-200	3,7	1090	4,0
980021	<b>Olympus Li-20B / Fuji NP-60 / Casio NP-30 / D-Li2 Pentax</b> AZ-1, AZ-2 ZOOM / Ferrari 2004	3,7	1050	3,9
980002	<b>Olympus LI-30B</b> mju-mini Digital, S	3,6	645	2,3
980004	<b>Olympus LI-40B/LI-42B / Nikon EN-EL10 / Fuji NP-45</b> mju-700, 720SW, 725SW, 730,740,750,760,770SW, 780,790SW, 820, 830, 1000, 1040, 1050SW, 1060, 1200 / FE-20, FE-190,230,240,250,290,300, 360, 370, 3010, 5000, 550, IR-300 / SP-700, X15	3,7	700	2,6
980005	<b>Olympus LI-50/52B</b> mju-850, 1010, 1020, 1030SW, 9000	3,7	700	2,6
980045	<b>Olympus LI-70B</b> FE-4020, FE-4040, FE-5040, VG-110 / 120 / 130 / 140, X-940	3,6	650	2,3

## KONICA / MINOLTA

980080	<b>Konica DR-LB4 / Minolta NP-500 / NP-600</b> Revio KD 310Z,400Z,410Z,420Z,500Z,510Z, Dimage G400, G500, G530, G600	3,7	1000	3,7
980041	<b>Minolta NP-400 / Pentax D-Li-50</b> Dimage A 1, A 2 / Dynax 5D, 7D	7,4	1500	11,1
980042	<b>Minolta NP-700</b> Dimage X50, X60	3,7	750	2,8
980030	<b>Minolta NP-800 / Nikon EN-EL1</b> Dimage A200	7,4	800	5,9
980035	<b>Minolta NP-900</b> Dimage E40, E50	3,7	650	2,4

PENTAX				
Artikel Nr	Bezeichnung	Spannung V	Kapazität mAh	Wattstunden
980021	<b>Pentax D-Li2 / Fuji NP-60 / Casio NP-30 / Olympus Li-20B</b> Optio 330, 430	3,7	1050	3,9
980023	<b>Pentax D-Li7 / Fuji NP-120 / Ricoh DB-43</b> Optio 450, 550, 555 / MX 4	3,7	1800	6,7
980020	<b>Pentax D-Li8 / Fuji NP-40</b> Optio S / S4, S4i, S5i, S6, S7, X, SV, Svi, WP, S5n, S5z, A10, T10, T20, W10, W20/ A30/ A40	3,7	710	2,6
980041	<b>Pentax D-Li-50 / Minolta NP-400</b> K10D, K20D	7,4	1500	11,1
980004	<b>Pentax D-Li63 / Olympus LI-40B / LI-42B / Nikon EN-EL10 / Fuji NP-45</b> Optio T30, W30, M30, V10, M40, L40	3,7	700	2,6
980037	<b>Pentax D-Li78 / Nikon EN-EL11 / Ricoh DB-80</b> Optio V20, M50, M60	3,7	680	2,5
SONY				
980077	<b>Sony NP-BN1</b> Cyber-shot DSC-T99, T110, TX5, TX7, TX9, TX10, TX55, TX100, W310, W320, W350, W380, W510, W530, W570, W610, W630, WX5, WX7, WX30	3,6	630	2,3
980078	<b>Sony NP-FW50</b> Alpha 33, 35, 55, NEX-3, NEX-5, NEX-7, NEX-C3,	7,2	900	6,5
980081	<b>Sony NP-FM500H</b> a200 Series, a300 Series, a350 Series, a700 Series, DSLR-A100, DSLR-A100/B	7,2	1630	11,7
SANYO				
980088	<b>Sanyo DB-L90</b> Xacti VPC-SH1	3,7	1200	4,4
RICOH				
980022	<b>Ricoh DB-20 / Fuji NP-80</b> RDC-6000, 7 / RR1	3,7	1500	5,6
980023	<b>Ricoh DB-43 / Fuji NP-120 / Pentax D-Li7</b> RR 10,30 / G3	3,7	1800	6,7
980102	<b>Ricoh DB-60 / Panasonic CGA-S005</b> R3, R4, R5, R30, R40, GX100	3,7	1250	4,6
980134	<b>Ricoh DB-70 / Panasonic DMW-BCE10E / VW-VBJ10</b> R6, R7, R8, R10	3,7	1000	3,7
980037	<b>Ricoh DB-80 / Nikon EN-EL11 / Pentax D-Li78</b> R50	3,7	680	2,5